


## REMOTE CONTROL

The remote control interface is shown as in Figure 2-7.

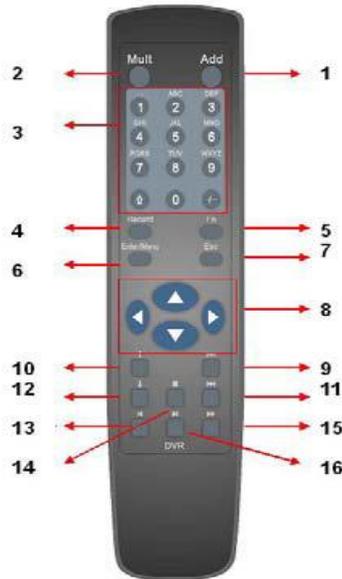

Button Number	Name	Same Function from the DVR Front Panel
1	Address	Press to input DVR serial number to enable user to control DVR. DVR Serial number will be the DVR address.
2	Multiple-window	Multiple window switch button as in the front panel labeled as (MULT)
3	0-9 number key	Input password, channel or switch channel. Shift is the button to switch the input method.
4	Record	Used to control record function
5	Auxiliary key	<ol style="list-style-type: none"> <li>One-window monitor mode, click this button to display assistant function: PTZ control and image color.</li> <li>Backspace function: in numeral control or text control, press it for 1.5 seconds to delete the previous character before the cursor.</li> <li>In motion detection setup, working with Fn and direction keys to configure settings.</li> <li>In text mode, click it to switch between numeral, English character (small/capitalized) and etc.</li> <li>In HDD management interface, you can click it to switch HDD record information and other information</li> </ol>



**VR Embedded DVR series: EM, LT and PRO series**

6	Confirm /menu	Used to confirm operation or go to MENU OSD
7	Cancel	<ul style="list-style-type: none"> <li>a. Go to previous menu, or cancel current operation</li> <li>b. At playback screen: click it to restore real-time monitor mode</li> </ul>
8	Direction	<ul style="list-style-type: none"> <li>a. Activate current control, modify setup, and then move up and down.</li> <li>b. Increase or decrease numeral value</li> <li>c. Function button for PTZ menu such as pan, tilt to left, right, up and downward.</li> <li>d. Shift current activated control, and then move left and right</li> <li>e. When at playback screen, click these buttons to control playback bar</li> </ul>
9	Forward	Various forward speeds and normal speed playback.
10	Previous	In playback mode, playback the previous video.
11	Backward	In normal playback or pause mode, click this button to reverse Playback
12	Stop	Stops playback