1. Download the Optiview VMS from our Technical Support site:

Optiview VMS

http://support.optiviewusa.com/DVR/software/VMS/2018/OptiviewVMS2018 En Win32 Optiview IS V2.02.0. T.20180331.exe

Connection Profile:

http://support.optiviewusa.com/dvr/software/VMS/device.xml

2. After installing the software, open it by clicking + and go to Devices

	New	+ <	
Q Auto Search $+$ Add	🗊 Delete	lmport	ŷ≻ Backup
Operation			
\bigcirc			
Live View	Access	Interc	om
Search			
\otimes	i	6	
Playback	People Counting	Heat M	Лар
Configuration		_	
	~@		<u></u>
Devices	Device CFG	Event C	onfig

3. Click "Import" as shown below to import pre-configured connection profile in order to connect the software to the Demo DVR at Optiview.

Ø OPTIVIEW	Devi	ces -	+-	
\bigcirc Auto Search $+$ Add	🗊 Delete	🍾 Im	port	ŷ≻ Backup
All Device				
No.		IP/Do	ame	Device Type

	Nev	N Devices	• +				
\bigcirc Auto Search + Add	🔟 Delete	الله الله الم	ŷ≻ Backup				
All Device							
No.		IP/Domain Name	Device Type	Device Model		Channel Number	Or
			Device Import				
			Local	From www.easy4ip.com			
			Local Path: Docur	ments/SingleIP_Export/device	e.xml 📙		
				Import	Cance	1	
					Calice		
				5 C	Click Imn	ort when rea	vhe
					cnek mp	ort, when ret	iciy.
, Á				(0 1	\$ <i>0</i> - 1	
	New	Devices	+			15	5:24:1′
Q Auto Search + Add	🔟 Delete	み Import 介 Ba	ackup	All Dev	ices: 1	Online Devices:	1

									10	.24. 1
Q Auto Sear	rch + Add	🗊 Delete	Import	ர∂ Backup				All Devices: 1	Online Devices: 1	
All Device	e Encode Devi	ice					\frown			
No.		P/Domain Name	Device Type	Device Model	Port	annel Numt	Online Status		Operation	
1	84KP demo	4L018EAPA	DVR	HDVR			🔵 Online	4L018EAPAZ78008	∥ቑ⊳₪	

4. View the LIVE Cameras by clicking the + icon then go to Live View

	New	+ <	
Q Auto Search + Add	🔟 Delete	lmport	ŷ [∞] Backup
Operation Live View	Access	Intere	com

5. Click the DVR icon for the DVR site connection

		Live View(1)	Devices	+	
Organizations					
Search	Q				
✓ ♣ Default Group			K THE		
► ■ 84KP demo		DVR ICON			
84KP demo					