P-606(W) Quick Guide

1. Hardware Connection

P-606(W) – Physical Overview



P-606(W) – Physical Connection



- 1. Prepare a PC with Ethernet link to the network
- 2. Connect LAN port (RJ45) of the camera to a network switch/hub
- 3. Connect power jack
- 4. Ensure the power adaptor specification matches the power system (110V or 220V) and connect the adaptor to the outlet
- 5. Check LED status (Power/Network)

2. Software Installation

The following software is necessary for the proper display and use of the camera/video server from the Web site. The software will be taken from the Software Package CD.

IP Installer

The IP Installer is used to locate and configure network cameras and video servers in the LAN.

3. Network Configuration

Using IP Installer to Assign IP Address

1. Once IP Installer has been successfully installed on the PC, double click to run the



software. IPInstaller.exe

2. Click the menu bar **[Tool] > [Search Network Device]** to search the device in the LAN.

🐻 Untitle	d - IP	Pinstaller				
File Edit	View	Telp				
🗋 🗅 🚅 🖡	3 😽	Search Network Device	Ctrl+F			
State M	1odel	Batch Setting Selected.		5ubnet Mask	Gateway	DNS1
		Synchronize Selected Compare Selected	Ctrl+D Ctrl+E			
Serach All Ne	twork	Device)		>

3. Select device with the MAC Address corresponds to the camera that is to be configured.

80 D	ntitled - IPIns	taller					
File	Edit <u>V</u> iew <u>T</u>	ool <u>H</u> elp					
	🖻 🔒 🔍	2) 2) X 🖻 🛍	8				
State	Model	Mac Address	IP Address	Subnet Mask	Gateway	DNS1	DNS2
	P410/P4	00-04-29-02-ed-1a	192.168.2.210	255.255.255.0	192.168.2.254	192.168.0.13	168.95.1.1
	P400/P4	00-04-29-01-10-90	192.168.2.31	255.255.255.0	192.168.2.254	192.168.0.13	192.168.0.16
	P606 W	00-04-29-00-b2-ff	192.168.2.35	255.255.255.0	192.168.2.254	192.168.0.13	0.0.0.0
	P600DN	00-04-20-00-8° ff	192.168.2.90	255.255.255.0	192.168.2.254	168.95.1.1	168.95.1.1
	P606 W	00-04-29-00-b4-ff	92.168.2.153	255.255.255.0	192.168.2.254	168.95.1.1	168.95.1.1
	P600DN	00-04-29-00-90-ff	192.168.1.145	255.255.255.0	192.168.1.254	192.168.0.13	168.95.1.1
			MA	C Address			

4. Double click the item to open the Property Page or click the menu bar **View > Property**.

80 U	ntitle	d – IPI	nstalle	T							
<u>F</u> ile	<u>E</u> dit	<u> </u> view ∣	<u>T</u> ool	<u>H</u> elp							
D	🖻 (✓ <u>I</u> oc	lbar		🖻 🛍	ę					
State	1	✓ Stat	us Bar			IP /	Address	Subnet Mask	Gateway	DNS1	DNS2
]	Out	m wep		-b2-ff	192	.168.2.94	255.255.255.0	192.168.2.25	4 192.168.0.13	192.168.0.16
		Pro	pertv		90-ff	192	.168.2.95	255.255.255.0	192.168.2.25	4 192.168.0.13	168.95.1.1
		Dof	Heer/	Daar	-c1-ff	192	.168.2.142	255.255.255.0	192.168.2.25	4 192.168.0.13	168.95.1.1
	1			07 22 01	L10-90	192	.168.2.31	255.255.255.0	192.168.2.25	4 192.168.0.13	192.168.0.16
	I	2600DN	00	-04-29-00	-8c-ff	192	.168.2.90	255.255.255.0	192.168.2.25	4 168.95.1.1	168.95.1.1

5. Modify the network settings of the camera.

Property Page		
Video Server Mac Addr 00-04-29-00-11-b2		OK Cancel
Property		Synchronize
IP Address	192.168.2.57	
Subnet Mask	255.255.255.0	
Gateway	192.168.2.254	
DNS1	192.168. 0 .13	
DNS2	168.95.1.1	
DNS3	0.0.0.0	
Http Port	80	
Usemame & Passwi	ora	-
🔲 Use Custom		
Username roo	t	
Password pas	ŝS	

6. After filling in the properties, click **[Synchronize]** button to complete the configuration

Property Page				
Video Server		1	ОК	
Mac Addr			Cancol	
00-04-29-00-11-b2			Cancer	
Property	(Synchronize	
IP Address	192.168.2.57			
Subnet Mask	255.255.255.0			
Gateway	192.168.2.254			
DNS1	192.168. 0.13			
DNS2	168.95.1.1			
DNS3	0.0.0.0			
Http Port	80			
Username & Passwo	ord]		
□ Use Custom				
Username roo	t			
Password pas	:8			

settings then click **[OK]** button to save in the PC.

Open the Web-based UI

 To access the Web-based UI of the selected unit, run the View > Open Web on the menu bar.

80 U	ntitled - IPInstaller						
File	<u>E</u> dit <u>V</u> iew <u>T</u> ool <u>H</u> elp						
	🗃 🖬 😫 🕄 👗	🖻 🖻 🤶					
State	Model	Mac Address	IP Address	Subnet Mask	Gateway	DNS1	DNS2
	P410/P416	00-04-29-02-ed-1a	192.168.2.210	255.255.255.0	192.168.2.254	192.168.0.13	168.95.1.1
	P606 W	00-04-29-00-b4-ff	192.168.2.153	255.255.255.0	192.168.2.254	168.95.1.1	168.95.1.1
	P600DN	00-04-29-00-8c-ff	192.168.2.90	255.255.255.0	192.168.2.254	168.95.1.1	168.95.1.1
	P400/P413/P423/P42	00-04-29-01-10-90	192.168.2.31	255.255.255.0	192.168.2.254	192.168.0.13	192.168.0.16
	P606 W	00-04-29-00-b2-ff	192.168.2.35	255.255.255.0	192.168.2.254	192.168.0.13	0.0.0.0
	P600DN	00-04-29-00-90-ff	100 160 1 145 Cut	OFF OFF OFF O	192.168.1.254	192.168.0.13	168.95.1.1
			Conv	Ctrl+C			
			<u>C</u> opy Pasta	Ctel+V			
		_	1_0.51C	Cuity	_		
			<u>S</u> earch Network D Insert Server	evice Ctrl+F			
			Select #11	Ctdad	-		
			Clear úll	CtdaR			
		_	Creativit	Curry	_		
			Batch Setting Sele	cted	_		
			Synchronize Selec	ted Ctrl+D			
			Compare Selected	Ctrl+E			
			<u>O</u> pen Web				
			Property				
				-			

2. For first time user, there will be a prompt to install the ActiveX control. Confirm the installation as it is required to view the video stream and some operations.

🕸 🌈 Live View					<u>6</u> • ⊡ - ∉	• • ⊡·網頁® • ◎ 工具◎ • "
這個個自己要要做下列附加元件:來自	Pixord Corporation'的 'pixord'。如果您信任該網站	达附加元件,而且想要安装,	請按這裡			×
PIXORD	IP: 192.168.1.116	H264	1600X1200	FPS	K bps	2009-08-04
	か お道想安装下列 ActiveX 控制項	: 來自 'Pixord Corporation' 的 '	sixord.			

3. If the device has been configured correctly, the default Web browser will open to the home page of the selected device.



* Username and password is required. (Default is admin / admin)

Verify and Complete the Installation from Your Browser

If not able to get the ActiveX download properly, user must temporarily lower your security settings to perform a one-time-only installation of the ActiveX component onto your workstation, as described below:

- 1. From the Tools menu, select [Internet Options] -> [Security] -> [Custom Level]
- 2. Set the security level to Low and click [OK].
- 3. Restore the security level after the ActiveX installation.