Notice

The following settings are now available for configuration via network operation as a result of changes in the specification.

Applicable models: VCC-HD4000/HD4000P


1 Authentication check disable setting (NETWORK SETTINGS screen)

Specifying "ON" for [ANONYMOUS USER LOGIN] allows all users to log into the camera as guest user without authentication. <Default: OFF>

ANONYMOUS USER LOGIN OFF 🔽

2 RTSP/RTP settings (CODEC/STREAMING SETTINGS screen)

The following RTSP/RTP related menus (portions enclosed by dashed line) have been added to the STREAMING (H.264 video streaming method) settings.

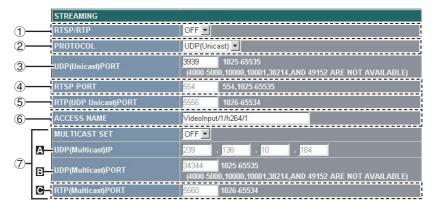

1 RTSP/RTP (New)

Enables (ON)/disables (OFF) RTSP/RTP.

- OFF < Default>: Use Sanyo proprietary protocol
- ON: Use RTSP/RTP

2 PROTOCOL

Specifies the protocol to be used for transmitting H.264 video

The available options depend on the [RTSP/RTP] setting.

- When [RTSP/RTP] is set to "OFF": UDP (Unicast) <Default>, HTTP
- When [RTSP/RTP] is set to "ON": UDP (Unicast) < Default>, RTSP, HTTP

3 UDP (Unicast) PORT

UDP (Unicast) port number must be specified when [RTSP/RTP] is set to "**OFF**", and [PROTOCOL] to "**UDP (Unicast)**". Specify a number between 1025 and 65535 (except 4000 to 5000, 10000, 10001, 38214, and 49152). <Default: 3939>

4 RTSP PORT (New)

RTSP port number must be specified when [RTSP/RTP] is set to "**ON**", and [PROTOCOL] to "**RTSP**". Specify 554, or a number between 1025 and 65535. <Default: 554>

⑤ RTP (UDP Unicast) PORT (New)

RTP (UDP Unicast) port number must be specified when [RTSP/RTP] is set to "**ON**", and [PROTOCOL] to "**UDP** (**Unicast**)".

Specify an even number between 1026 and 65534. < Default: 5556>

6 ACCESS NAME (New)

Access URL can be set to enable access to the camera from a video viewer or similar software.
The URL must be up to 32 alphanumeric characters.
<Default: VideoInput/1/h264/1>

⑦ MULTICAST SET

To perform multicast streaming, specify "**ON**" for [MULTICAST SET] and configure the settings below. Note that multicast streaming is available only within the LAN.

□ UDP (Multicast) IP

Specify a multicast address between 224.0.0.0 to 239.255.255.255.

■ UDP (Multicast) PORT

UDP (Multicast) port number must be specified when [RTSP/RTP] is set to "**OFF**".

Specify a number between 1025 and 65535 (except 4000 to 5000, 10000, 10001, 32814, and 49152). < Default: 34344>

RTP (Multicast) PORT (New)

RTP (Multicast) port number must be specified when [RTSP/RTP] is set to " \mathbf{ON} ".

Specify an even number between 1026 and 65534. < Default: 5560>

3 Additional options (IMAGE TRANSMISSION SETTINGS - FTP mode screen)

The following options (portions in boldface) have been added to [TX RATE] in the TIMER transmission settings.



1SEC, 3SEC, 5SEC, 10SEC, 1MIN<Default>, 2MIN, 3MIN, 4MIN, 5MIN, 10MIN, 15MIN, 30MIN, 1HOUR, 2HOUR, 3HOUR, 4HOUR, 5HOUR, 6HOUR, 7HOUR, 8HOUR, 12HOUR, 24HOUR