

## How to Setup Alarm with VREM and VRPRO Series

1. Right click mouse at the Live screen then click "menu" to bring up the login window. Enter your login credentials. Default is username: 888888, password: 888888.



2. Main menu GUI (graphical user interface) will show up on the screen. Click your mouse on "setting".



3. Click "Alarm" to bring up the alarm setup menu screen, as shown below.

	ALAF	RM	
Event Type Enable	Local Alarm 🔻	Alarm In Type	1   Normal Open
Period Alarm Out	Set	Anti-dither Latch	0 sec. 10 sec.
Record Channel	123456 Select	Delay	1213141516 10sec.
I ∎ Tour I Snapshot I Video Matrix	123456 123456		
Buzzer Copy Pa	aste Default	t) Sav	e Cancel

- 4. Select the Alarm Input number and the alarm device type (normal open or normal close relay switch). Check what type is your alarm device, refer to your manufacturer's specification.
- 5. Select the "Period" <SET> to specify the time and day the alarm is active or ON.



9		_	Set	<u>k</u>		_	_	_
Work Da	y 🗖 (	Set						
00:00	-24 :00			00:00	-2	4:00	)	
00:00	-24 :00	)		00:00	-2	4-10	)	
00:00	-24 :00	)		00:00	-2	4 :00	)	
	0 3	6	9 12	15	18	21	24	
in on	-	-	-	-	-			
ie od	101 101 10 101 101 10							
eu าน		-	-	-	-			
i at	-	-	-	-	-			
	0 3	6	9 12	15	18	21	24	
			9 12			21	24	
Сору	Paste		Default		0	ĸ		Cance

- 6. Select which Alarm Output to link into the selected Alarm Input device. Normally, Alarm IN 1 is linked to Alarm Out1, Alarm IN2 linked to Alarm Out2, etc....
- 7. Select <Show Message> to show pop up an Alarm status window box at the DVR screen as shown below



- 8. Select <Send email> to send an email notification through your email server/provider.
- 9. Enter <Latch> in seconds, the DVR system automatically delays specified time (in seconds) in turning OFF the alarm and activated output after an external alarm was cancelled
- 10. Select <Record Channel> to record "alarm" video from a certain camera number whenever an Alarm IN is triggered.
- 11. Select <PTZ Activation>, you can set PTZ movement when alarm occurs such as go to preset position, tour & pattern when there is an alarm. Note: all PTZ movement are preconfigured from a PTZ setup menu screen.

<b>B</b>		PTZ	Activation			X
CAM 1	None	- 0	CAM 2	None	•	0
CAM 3	None	• 0	CAM 4	None		0
CAM 5	None	- 0	CAM 6	None		0
CAM 7	None	• 0	CAM 8	None		0
CAM 9	None	• 0	CAM 10	None		0
CAM 11	None	• 0	CAM 12	None		0
CAM 13	None	• 0	CAM 14	None		0
CAM 15	None	• 0	CAM 16	None	•	0
	ОК		Cancel	)		

- 12. Select <Tour> to enable camera display tour on one partition screen monitor. Series of camera you selected will be displayed on one partition screen in sequence.
- 13. Snapshot is not available on this DVR model.
- 14. Select <Video Matrix> to show the camera that had an alarm triggered.
- 15. Select <Buzzer> to beep the local buzzer inside the DVR recorder.
- 16. Click <Save>
- 17. Setup another Alarm Input device by clicking <Alarm IN> and repeat all the steps mentioned above.